PURE

One Flow

Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

Option 1: You can register your purchase on-line at: https://www.pure.com/au/register/register.asp

Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.

If you have any questions about your warranty you can call us toll free 1800 988 268.

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to http://support.pure.com/au/ and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear
- Products with serial number defacement, modification or removal
- Water damage or corrosion caused by dampness
- Any damage or deterioration due to shipment
- Any product which has been subjected to misuse, abuse or accident

Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202

One Flow

Thank you for choosing One Flow. This wireless music and radio system brings a world of listening simply and easily within your reach. You can use it to enjoy music streamed wirelessly from your iOS or Android device or from your PC or Mac; to listen to any Internet, digital or FM radio station; and to play thousands of podcasts, on-demand radio programmes and evocative ambient sounds. You can also access the cloud-based on-demand subscription streaming service to gain instant access to millions of music tracks. This manual will get you up and running in no time, and explains how to make the most of your One Flow. We're constantly improving and adding new features to our products. To take advantage of any enhancements made since your product was shipped, please visit www.pure.com where you can download the latest version of this user guide in PDF format.
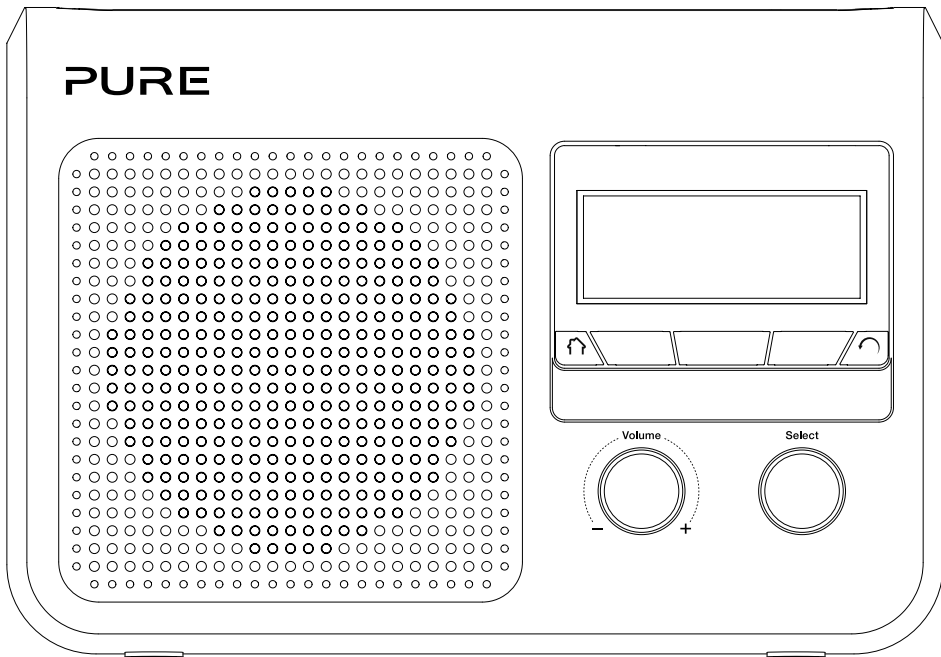
Important safety instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.

2. Keep these instructions – The safety and operating instructions should be retained for future reference.

3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.

4. Follow all instructions – All operating and use instructions should be followed.

5. Do not use this apparatus near water.

6. Clean only with dry cloth.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, stoves, or other apparatus that produce heat.

9. Only use attachments and accessories specified by the manufacturer.

10. Unplug the apparatus during lightning storms or when unused for long periods of time.

11. Do not use the mains adapter outdoors.

12. Be aware of volume levels when using headphones, excessive volume can damage your hearing.

13. Cease use immediately if apparatus exhibits any signs of mechanical damage, excessive temperature, swelling or splitting.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

16. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, or the apparatus does not operate normally, or has been dropped.

17. Use only power supplies listed in the user instructions (UK with model no. KSAA0550100W1UK, Australia with model no. KSAA0550100W1AU manufactured by Pure).

18. WARNING To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

19. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

20. WARNING: The direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.

21. ▣ This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

⚠ Damage to hearing can occur with consistent exposure to high volume when using headphones. Always check the volume level before inserting headphones into your ears.

Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Stop listening to your radio if you find it distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Contents

Getting started

Quick start

Note: If you have a ChargePAK E1 rechargeable battery (sold separately) fit it now before plugging in One Flow. See page 18 for more information.

1   Extend the aerial and insert the connector of the supplied power adapter into the 5.5V DC input on the rear of One Flow. Plug the adapter into the power supply. **Pure** is displayed briefly on-screen.
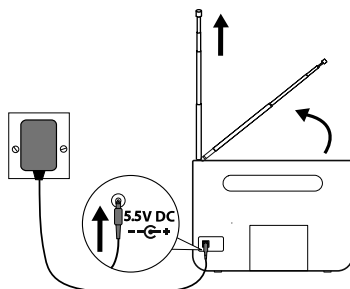

2   Choose your display language (English, French, German or Italian) by turning the **Select** dial to highlight the language you want. Push the **Select** dial in to confirm your choice. Repeat this process to select the time zone and region closest to you.

3   The audio source screen is displayed, showing the following options. Turn the **Select** dial to highlight and press to select from:
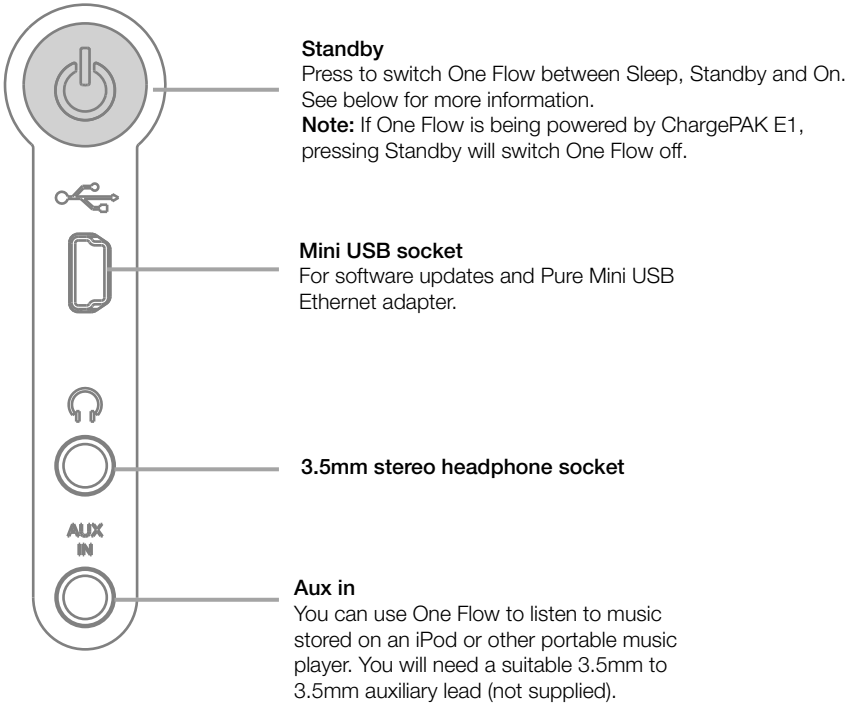
Digital radio	See page 13
Pure Connect	See page 8
Media player	See page 12
FM radio	See page 13
Auxiliary input	See page 6

Front panel controls
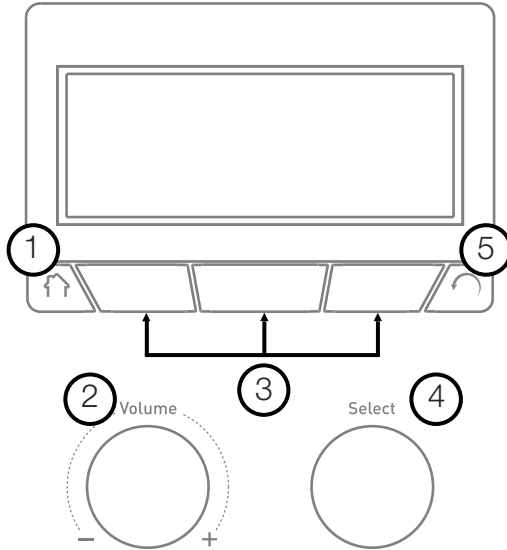
No.	Control	Description
1	Home	Press to return to the audio source screen.
2	Volume dial	Turn to adjust volume. Push to mute and un-mute.
3	Context-sensitive buttons	Press the button that corresponds to the function shown on screen that you want to use.
4	Select dial	Turn to navigate menus, stations or options, push to select an item. Push to pause a media track or podcast.
5	Back	Press to go back to the previous screen.

Side panel controls and connectors

Standby
Press to switch One Flow between Sleep, Standby and On.
See below for more information.
Note: If One Flow is being powered by ChargePAK E1,
pressing Standby will switch One Flow off.

Mini USB socket
For software updates and Pure Mini USB
Ethernet adapter.

3.5mm stereo headphone socket

Aux in
You can use One Flow to listen to music
stored on an iPod or other portable music
player. You will need a suitable 3.5mm to
3.5mm auxiliary lead (not supplied).

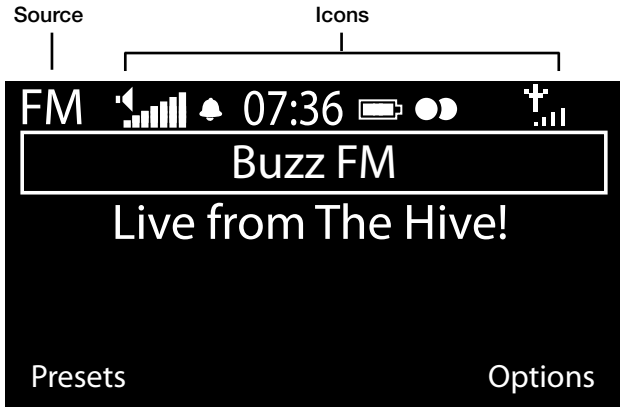# Switching between Sleep, Standby and On

One Flow has three power modes, **Standby**, **Sleep** and **On**. In Standby, One Flow uses minimal power.
In Sleep mode, One Flow remains connected to the wireless network (once attached) and is ready to
stream music using the Pure Connect app. See page 11 for more information.
To enter Sleep mode, press **Standby**.
To enter Standby mode, press and hold **Standby**.
Once in Sleep/Standby mode, press **Standby** to switch to On.

Screen icons

Source   Icons

```
FM    📶 🔔 07:36 🔋 ◕◗        📶
┌─────────────────────────────────────┐
│              Buzz FM                 │
└─────────────────────────────────────┘
        Live from The Hive!



   Presets                    Options
```

Source

DR   Digital radio

PC   Pure Connect

MP   Media player

FM   FM

AUX Auxiliary input

     Caskeid

Icons

📶   Volume level

🔇   Mute

🔔🕓 Alarm/timer set indicators

07:36 Clock

🔋   ChargePAK battery level*

◕◗   Stereo signal

📶   Signal strength (Digital, FM or Wi-Fi)

🖥   Ethernet connection active

🖥× Ethernet connection lost

*ChargePAK E1 sold separately.

7

Internet listening via Pure Connect

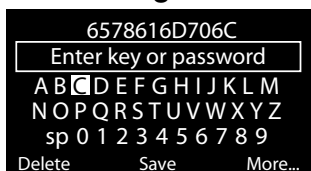Pure Connect is an online media portal that provides you with quick and easy access to thousands of internet radio stations, on-demand programmes, podcasts and ambient sounds. You can enjoy all this content on your One Flow, on smartphones and tablets running the Pure Connect app, and on the Pure Connect website. You can also use Pure Connect to access additional subscription services such as Pure Connect's cloud-based music streaming service*, which provides you with instant access to millions of music tracks.

To access Pure Connect on One Flow, you will need to connect One Flow to your network. See below for more information.

After connecting One Flow to your network, you can register your One Flow on the Pure Connect website. We recommend registering your One Flow as this allows you to manage your Pure Connect favourites and access additional subscription services like music streaming.

Connecting to the Internet

```
          6578616D706C
    Enter key or password
    A B C D E F G H I J K L M
    N O P Q R S T U V W X Y Z
      sp 0 1 2 3 4 5 6 7 8 9
  Delete        Save        More...
```

Using your wireless network

1. Press **Home** and select **Pure Connect** from the audio source screen. One Flow will scan for wireless networks and show them in a list.

2. Select your network. If your network requires a key, follow steps 3-4.

3. Enter your network key or password by turning and pressing the **Select** dial to highlight and select characters. Select **sp** to insert a space. Press **More...** for lower-case; press it again for symbols. Press **Delete** to remove the last character.

4. Press **Save** to finish. One Flow will connect to your network.

Helpful hint: Your Wi-Fi key is case sensitive, make sure to enter it exactly as shown.

Using an Ethernet connection

You can also connect One Flow to the Internet using the optional Pure Mini USB Ethernet adapter.
To use the Pure Mini USB Ethernet adapter, connect your network cable to the adapter, then connect the adapter to the mini USB socket on your One Flow. You will then need to select the Ethernet network option (see page 17). The adapter USB light comes on and a connection to your network is made automatically.
The Ethernet connection status is shown on screen (see page 7).
Note: Ethernet connection is only possible when AC power is connected.
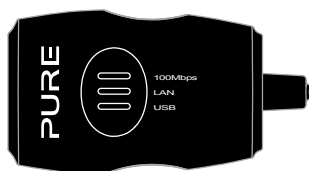
Listening to Internet radio

```
    My favourites ♥
    Live Radio
    Listen again
    Podcasts
    Pure Sounds
```

Pure Connect home screen

Thousands of radio stations around the world broadcast online. To listen, select **Pure Connect** from the audio source screen. Your One Flow will tune to the last station you listened to or show you the stations list. Turn the **Select** dial to enter the Pure Connect home screen. Select **Live Radio** to see a list of currently available Internet stations. Use the **Select** dial to browse the list and push to tune in. You can add a station to your **Favourites** by pressing **Add**.

*You will need to subscribe to our Blue or Violet subscription level to access music streaming on One Flow. For more information on the various subscription levels visit connect.pure.com.

8

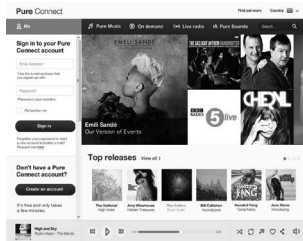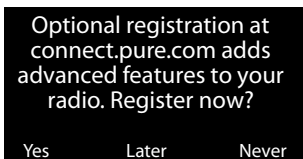|	
Name	[All]
Genre	[Classical]
Country	[Netherlands]
Language	[Dutch]
Quality	[All]
Clear all	Go

Station search screen

Wind chimes in suburbs
Wooden lock
Accoustic guitar (E,A,D...
Active daytime birds
Arctic Blizzard
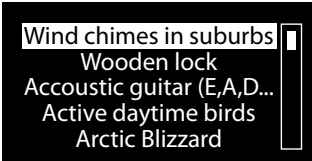
Browsing Pure Sounds

connect.pure.com

Optional registration at
connect.pure.com adds
advanced features to your
radio. Register now?

Yes   Later   Never

QPZKE
Enter registration code
A B C D E F G H I J K L M
N O P Q R S T U V W X Y Z
sp 0 1 2 3 4 5 6 7 8 9
Del   Save   More...

Search for a station

Press **Search** when browsing the station list to search for stations by **Name, Genre, Country, Language, Quality** (sound quality), or any combination of these. Use the **Select** dial to set your options and press **Go** to see the list of results.

Searching for an internet radio station using Quick Jump

The Quick Jump function lets you to search for stations that begin with a certain letter. To use Quick Jump:

1. Tap the **A-Z** button to open the Quick Jump box.
2. Turn and press the **Select** dial to select the first letter of the radio station that you want to search for.

Listening to other Internet content

Press **Home** and select **Pure Connect** from the audio source screen, then one of the following content types:

Listen again

Select this option to access the BBC Listen Again service, which lets you catch up with any BBC radio shows that you might of missed. These archived programmes are available to listen to for a set period of time after the live broadcast.

Podcasts

Podcasts are prerecorded audio shows on a wide variety of subjects such as comedy, arts, business, and culture, for you to enjoy anytime.

Pure Sounds

Our library of evocative ambient sounds, including birdsong, cityscapes, and waves on shore.

Creating a Pure Connect account

All you need to create a Pure Connect account and register your One Flow is a valid e-mail address. We'll need to send you a couple of e-mails and you won't be able to complete the process without access to them.

To create a Pure Connect account:

1. Open your Internet browser.
2. Go to connect.pure.com.
3. Click **Create account** and follow the instructions on-screen.

Register your One Flow on Pure Connect

1. Log in to Pure Connect, click **Me** and select **Devices**. You'll see your registration code.
2. From **Pure Connect settings** on your radio, select **Register with Pure Connect** to enter your code. Use the **Select** dial to highlight and select characters; press **Delete** to erase characters; and press **Save** to finish.

Congratulations! You've registered your One Flow on Pure Connect. The favourites you've created on Pure Connect will be visible on your One Flow, and those you've created on One Flow will appear on Pure Connect.

PC ▂▃▄▅ 07:36 ⊤

Say Something [Original

Folks - Say Something

⏮   ⏭   Options

Streaming a track using Pure
Connect's music streaming

Music streaming

Pure Connect's music streaming is a cloud-based on-demand subscription service that gives you instant access to millions of music tracks from one of the world's largest music catalogues covering almost every conceivable artist and genre. You can listen on our music streaming and radio systems, on an Apple or Android device running the Pure Connect app or on the Pure Connect website.

Pure Connect's music streaming service is only available in certain countries. Please see http://www.pure.com/availability/ for details.

Accessing Pure Connect's music streaming on One Flow

1. Press **Home** and select **Pure Connect** from the Home screen.
2. Turn and press the **Select** dial to select **Pure Music**.
3. Turn and press the **Select** dial to select one of the following options:

    My Tracks: Select this option to access the tracks that you have purchased from Pure Connect.

    Catalogue: Select this option to browse or search the complete music catalogue on your One Flow.

    By playlist: Select this option to listen to playlists created by you at connect.pure.com or via the Pure Connect App (see page 11).

Tagged to your account

Price: £0.99

Title: Say Something
Artist: Folks
Album: I See Cathedrals
Exit   Buy

Identifying a track using the
Pure Connect tagging service

Pure Connect tagging service

The Pure Connect tagging service can be used to identify, bookmark and purchase tracks that are playing on a digital, FM or Internet radio station In addition to accessing your favourite music tracks, the Pure Connect tagging service also automatically back catalogues any music by similar artists that you might be interested in, allowing you to explore something completely new or rediscover forgotten favourites.

Note: To use the Pure Connect tagging service, your One Flow will need to be connected to the internet and you will need a Pure Connect account. See page 9 for more information on setting up a Pure Connect account.

1. Press the **Tag** button.
2. One Flow will identify the name of the song that is being played and allow you to buy it (or stream it if you have a music streaming subscription).

Note: To access your tagged tracks list, you will need to log in to your Pure Connect account at connect.pure.com.

Note: The Pure Connect tagging service will attempt to identify and match any playing track using our extensive catalogue. Purchasing and streaming tracks is subject to availability.

Streaming from the Pure Connect app

You can use the Pure Connect app to stream any music stored on your smartphone or tablet as well as all the content available on Pure Connect to One Flow and other Caskeid compatible devices (such as Jongo).

Note: Any devices that you want to use with the Pure Connect app will need to be on the same network.

Downloading the Pure Connect app
You can download the Pure Connect app on your smartphone or tablet from the Apple App Store or Google Play.

[QR code]   from the Apple App Store   [QR code]   from Google Play

Selecting One Flow or other Caskeid compatible device in the Pure Connect app

With the Pure Connect app you can stream to a single Caskeid device or multiple Caskeid devices simultaneously.

To start streaming content:

1.   Select the content that you want to stream in the Pure Connect app.

2.   Tap the 🎧 icon in the app player bar on your iOS or Android device to view a list of available devices on your network.

3.   Tap the ◯ icon next to the Caskeid compatible devices that you want to stream to.

Your selected content will start playing on the Caskeid devices that you selected.

See the help supplied with the app for more information on streaming to a Caskeid device.
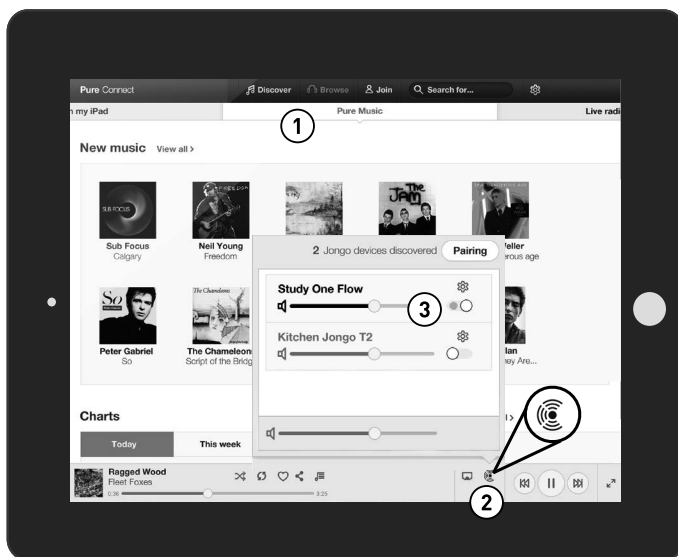
Pure Connect app

Streaming music from a PC or Mac

You can stream music stored on your computer or on a UPnP-compatible Network Attached Storage (NAS) device to One Flow. To stream music from your computer you will need to install media server software on it.

Listening to streamed tracks on One Flow

1. Press **Home** and turn and press the **Select** dial to choose **Media player** from audio source screen.

2. Turn and press the **Select** dial to choose the media player that you want to stream music from.

3. Turn and press the **Select** dial to navigate and select the track or playlist.

Playing/pausing audio playback
Press the **Select** dial to pause/play a track that is playing on One Flow.

Seeking within a track
While paused, you can hold down the ◀◀ and ▶▶ buttons to seek within the track.

Skipping backwards and forwards between tracks
If you are streaming audio on One Flow from a media server, you can press the ◀◀ ▶▶ buttons to skip back/forward between tracks.
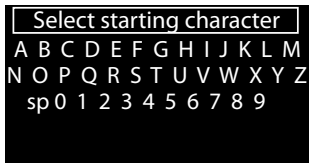
Listening to digital or FM radio

Extend the aerial, then press **Home** and select **Digital radio** or **FM radio** from the audio source screen. The first time you select digital radio, One Flow will perform an autotune to find all available stations and will tune into one when finished.
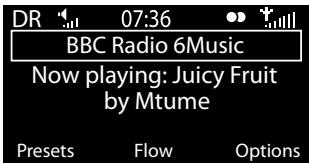
Digital radio screen
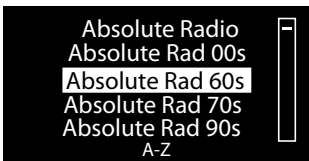
Changing digital radio station

Searching for digital radio station

Changing FM radio stations

Selecting a preset

Changing digital stations

1. Turn the **Select** dial left or right to browse through the list of available digital stations.
2. Push the **Select** dial to change the station.

Searching for digital stations

1. Turn the **Select** dial left or right.
2. Press **A-Z** to open the search option.
3. Turn and press the **Select** dial to select the first letter of the radio station that you want to listen to.
4. Push the **Select** dial to change the station.

Changing FM stations

Turn the **Select** dial to seek to the next or previous FM station.

Storing a preset

Tune to the station you want to store as a preset and press Presets. Turn the **Select** dial to highlight a preset number. Press **Store** to store the preset. (You can replace existing presets).

Listening to a preset

Press **Presets**, select the station that you want to recall and press **Listen**, or push the **Select** dial.

Setting alarms and timers

One Flow has two alarms and two types of timers (kitchen and sleep). To set an alarm or a timer up, press **Options** and select **Alarm or timer.**

Setting an alarm

1. From the **Alarm or timer** menu, turn and press the **Select** dial to select either **Alarm 1 settings** or **Alarm 2 settings** and press **Edit**.
2. Turn and press the **Select** dial to turn the alarm **On** or **Off.**
3. Turn the **Select** dial to adjust the hours and press to confirm. Repeat to set the minutes**.**
4. Turn the **Select** dial to set the days the alarm sounds. Choose between **Once only**, **Daily**, **Weekdays**, **Weekends, Every Saturday** and **Every Sunday** then press the **Select** dial to confirm**.**
5. Turn the **Select** dial to set the alarm type. Choose between **Pure Connect station**, **Digital radio**, **FM radio** or **Tone** then press the **Select** dial to confirm.
6. If you've set the alarm type as **Pure Connect station**, **Digital radio** or **FM radio,** turn the **Select** dial to choose between **Last tuned** (last station tuned to) or select a favourite Pure Connect station or digital and FM preset if you have any saved.
7. Turn the **Select** dial to change the alarm volume and press to confirm.
8. A set alarm is indicated by 🔔 in the icon bar.

Note: Any alarms that are set will not go off if One Flow is being powered by a ChargePAK.

Setting the sleep timer

The sleep timer switches your radio into standby/sleep after a specified amount of time. From the **Alarm or timer** menu, select **Sleep timer**. Use the **Select** dial to adjust the length of the sleep timer in 15 minute steps from 15 mins to 1 hour 30 mins. Press **Save** to store.

A set sleep timer is indicated by 🕓 in the icon bar.

Setting the kitchen timer

The kitchen timer sounds a beeping tone after a set period of time.
From the **Alarm or timer** menu select **Kitchen timer** and use the Select dial to adjust the length of time. Press **Mins** to toggle between minutes and hours. Press **Save** to confirm.

A set kitchen timer is indicated by 🕓 in the icon bar.

Cancelling a sounding alarm or timer

To cancel a sounding alarm or timer, push either the **Select** or **Volume** dial. A sounding alarm will automatically cancel after 1 hour.
Note: Pushing the **Volume** dial will not cancel a tone alarm.

Warning: When powered by ChargePAK E1, pressing **Standby** switches the radio off and any set alarm or timer will not sound.

Snoozing a sounding alarm

Tap the **Snooze** button to snooze a sounding alarm for the specified time (default 9 minutes).

Changing the alarm snooze time

From the **Alarm or timer** menu, select **Snooze time**. Use the **Select** dial to adjust the duration of the snooze from 5 to 15, then either 20/25/30/40 minutes, or 1 hour.

Cancelling a snoozing alarm

To cancel a snoozing alarm push either the **Select** or **Volume** dial.

Options and settings

Pure Connect settings

These settings are only available when listening to Pure Connect. Press **Options,** then select **Pure Connect settings**.

Clear favourites

Select **Clear favourites** to remove all stations/podcasts/Pure Sounds from your favourites list, as well as from Pure Connect if your radio is connected.

Register with Pure Connect

Enter your Pure Connect registration code if you haven't already done so.

Autotune

The Autotune option scans all digital frequencies for stations and automatically adds any new digital radio stations and removes any inactive ones. This option is only available if listening to digital radio. Press **Options**, then select **Autotune**.

FM settings

These settings are only available when listening to FM radio. Press **Options**, then select **FM settings**.

FM tuning

To change the way the **Select** dial works, choose **Seek tune** or **Manual tune.**

> **Seek tune**: Automatically tunes to the next station with a strong signal.
> **Manual tune**: Tunes up or down in steps of 0.5MHz.

FM stereo

Switch between receiving FM stations in **Mono** (default) or **Stereo**. If listening with headphones, you may want to change this setting to stereo.

Media player settings

These settings are only available when listening to the Media player source. Press **Options**, then select **Media player settings**.

Repeat

Select the repeat type.

> **Off** (default): Tracks are played until the end of the current album, folder, playlist or search results.
> **All**: Continuously repeats the current album, folder, playlist, or your search results.
> **Track**: Repeats the current track.

Shuffle

Select the order that tracks in the current album, folder, playlist or search results are played:

> **Off** (default): Tracks play in the order that they are displayed on-screen.
> **On**: Tracks play in random order.

Media server

View technical details about your current media server or re-scan for alternative servers:

> **Current details**: Turn the **Select** dial to view information about the Media server, including the media server name, the software version, the IP address and the port number.
> **Scan for servers**: Re-scans for new servers on the network.

Network settings

The network settings menu, which allows you to configure your network, is available when listening to Media player or Pure Connect.

Display options

Adjust display settings, such as screen duration and the information displayed while you are listening to each source. Press **Options** then **Display** to open the menu.

Information

Different information displays are available for each audio source:

Digital/FM radio

Scrolling text: Text information broadcast by the current station. May include song titles, programme details, news, etc.

Reception info: Displays the current frequency and signal strength.

Time and date: Displays the current time and date.

Pure Connect

Description: Broadcast by the current station. May include song titles and programme details.

Location and Genre: Information about the current station, e.g., US Rock.

Time offset: Most stations will be live streams, but otherwise displays how far into a broadcast the station is.

Wi-Fi signal strength: Displays a bar indicating the current Wi-Fi signal strength.

Station URL: Displays the URL address of the current station.

Time and date: Displays the date with a full-screen clock (as in standby mode).

Media player

Track info: Displays artist and album information (id3 tags).

Time offset/duration: Displays a progress bar and timers indicating the current track position.

Wi-Fi signal strength: Displays a bar indicating the current Wi-Fi signal strength.

Time and date: Displays the date with a full-screen clock (as in standby mode).

Active and Standby backlight

You can adjust the duration that the screen is illuminated when switched on or in standby. Select **Active** backlight to adjust the display settings that apply when the radio is switched on or **Standby** backlight to adjust the display settings that apply when your radio is in standby. Choose from **Always on** or **Off after 7 seconds**.

Changing the radio name

Your One Flow is assigned a name. This name is used so that you can find your radio easily when using the Pure Connect website to manage your listening. This name is also used to identify One Flow as an available speaker in the Pure Connect app. By default this name is My One Flow, but here you can change this to anything you like to make it more memorable. To assign a custom name to One Flow:

1. Press **Options** and turn and press the **Select** dial to select **Additional settings**.
2. Turn and press the **Select** dial to select **View/change device name**. The name that has currently been assigned to One Flow will display at the top of the screen.
3. Turn and press the **Select** dial to enter a new name.
4. Press **Save** when you have finished setting up the radio name.

Upgrading One Flow

Software updates may be issued in the future to provide new features and functions We recommend using automatic software updates for your One Flow, which are delivered via the Wi-Fi connection. If a software update is available, One Flow will display a message asking if you would like to install the software update.

To upgrade over your network manually

1. Press **Options**, select **Additional settings.**
2. Turn and press the **Select** dial to select **Upgrade**.
3. Your radio will search for any available updates. If an update is available the message **New version available: vX.X** will appear on screen (X.X is the version number, i.e. v2.1).
4. Press **OK** to download and install the new software. This can take up to 5 minutes.

To upgrade using a USB cable (when a network is not available)

Contact Pure technical support (http://support.pure.com) for information on how to upgrade One Flow to the latest version of software.

Warning: Do not switch off One Flow while it is updating.

Network settings

Press **Options** from either Pure Connect or Media player, then select **Network settings** to view options for configuring your network connection.

Connection wizard

Scan for wireless networks to connect to.

View details

Displays your wireless network configuration details.

> **Network name (SSID)**
>
> **Encryption method (WEP, WPA or WPA2)**
>
> **IP address**
>
> **Network mask**
>
> **DNS IP address**
>
> **Router IP address**
>
> **Radio MAC addres**s
>
> **Access point MAC address**

Manual setup

Manually configure your wireless network settings (for advanced users only).

> **Retry connection**: Attempts to reconnect to the selected network.
>
> **Network name**: **Scan for networks** or **Enter SSID manually** to specify a new SSID for your wireless network.
>
> **Encryption mode**: Change the encryption mode between **WEP**, **WPA (PSK)**, **WPA2 (PSK)** or **None**. One Flow automatically detects the mode for your network. Only change this setting if you think the encryption mode is incorrect.
>
> **Key or password**: Enter a new encryption key or password.
>
> **IP address**: Choose between **DHCP** (dynamic) or **Static**.

Clear network settings

One Flow will delete all previous Wi-Fi connections, passwords and settings and perform a fresh scan for available networks.

Using an optional ChargePAK

ChargePAK makes your Pure radio truly portable, so you can enjoy the programmes you love in the garden or at the beach.

Because it's rechargeable ChargePAK is much cheaper than regular batteries. It's also more eco-friendly because it reduces the amount of toxic substances sent to landfill. And, because it's a fit-and-forget solution that charges whenever your radio is connected to the power outlet, it's much more convenient than standard rechargeable batteries.

Installing a ChargePAK

1. Switch your One Flow off and disconnect it from the power supply.
2. Open the battery compartment and push the ChargePAK connector plug into the socket in the compartment. Line up the ridges on the plug with the slots in the socket. Do not force the plug.
3. Insert ChargePAK into the battery compartment.
4. Replace the battery door and connect your product to a power outlet.
5. ChargePAK will begin charging. When charging your ChargePAK for the first time or after an extended period of inactivity we recommend that you charge it for around 24 hours to ensure full battery power.

Note: It is normal for your ChargePAK to get warm, especially during charging. Your ChargePAK will give years of trouble-free use under normal circumstances, but like all rechargeable batteries its efficiency will gradually reduce with age.

Important: One Flow can only be powered with a Pure ChargePAK E1 and is not compatible with any other batteries, either disposable or rechargeable, or any other ChargePAK model.
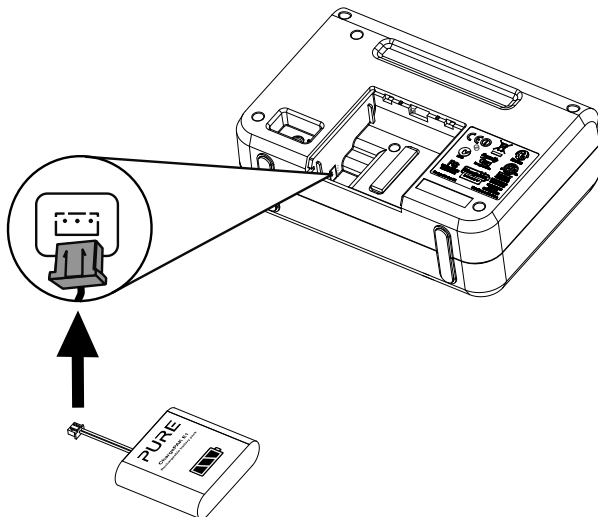
Help and advice

I am having trouble connecting to my network
- Your radio can't connect to wireless networks that are access controlled, such as office networks, without a WEP, WPA or WPA2 key or password.
- Your radio needs to be positioned within the range of your wireless network, which will be reduced if there are walls between your router and radio. Although One Flow is very good at picking up wireless networks, the strength of the Wi-Fi signal will vary depending on your router and the surrounding environment. If One Flow fails to find your wireless network, or the signal drops off, move the radio closer to the router.
- Unless your wireless network is 'open' (this is generally not recommended due to the risk of unauthorised access), make sure you have your WEP, WPA or WPA2 key to hand.
- If you also experience trouble connecting to your network with the Ethernet adapter, check your Internet connection using a computer. If this is OK, try restarting your modem.

Screen displays 'Station not available'
- If a station will not play visit http://support.pure.com for assistance.

Specifications

Radio	Digital, FM and Internet (via Wi-Fi or Ethernet connection).
Frequencies	DAB/DAB+/DMB-R/Parametric stereo decode up to 256 kbps.
	FM 87.5-108 MHz.
Wireless	802.11b and 802.11g supported with WEP and WPA/WPA2 encryption.
	2.412GHz ~ 2.472GHz (channels 1 to 13).
	0.5 MB broadband speed recommended.
Media streaming	Audio codecs supported include WMA (Standard V9), AAC, MP3, MP2, Real Audio (cook). Media streaming requires UPnP server or PC/MAC running UPnP server software (supplied upon registration to connect.pure.com).
Speaker	3.5" full range driver.
Input connectors	5.5V DC power adaptor socket (adapter supplied). 3.5mm Line-in for auxiliary devices. USB (mini-AB type) for product updates (also available over Wi-Fi) or optional mini USB Ethernet adapter.
Output connectors	3.5mm stereo out.
Presets	30 digital radio, 10 FM radio and unlimited Internet radio favourites (requires registration at connect.pure.com).
Display	Graphical LCD. 128 x 64 pixels. Green LED backlight.
Mains power supply	100-240V, 50/60Hz 5.5V DC external power adapter.
ChargePAK	Pure ChargePAK E1 rechargeable battery pack (available separately).
Power consumption	Standby: 2W, Active: 2.5W.
Approvals CE◯	CE marked. Hereby, Pure, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The Declaration of Conformity may be consulted at http://www.pure.com/R&TTE-DoC. ETSI EN 300 401 compliant. Australian C-Tick N1600 and Electrical Safety.
Dimensions	147 mm high x 207 mm wide x 80 mm deep
Weight	0.65 kg
Warranty	Comprehensive three year warranty.

Disposal of Waste Electrical & Electronic Equipment

This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Copyright

Trademarks

Warranty Information

Disclaimer

PURE